




How to change front hub endcaps - XCX+, TRS+ and LG1+

Easy endcap swaps on all front hubs

Written By: The Hive - Jeremy

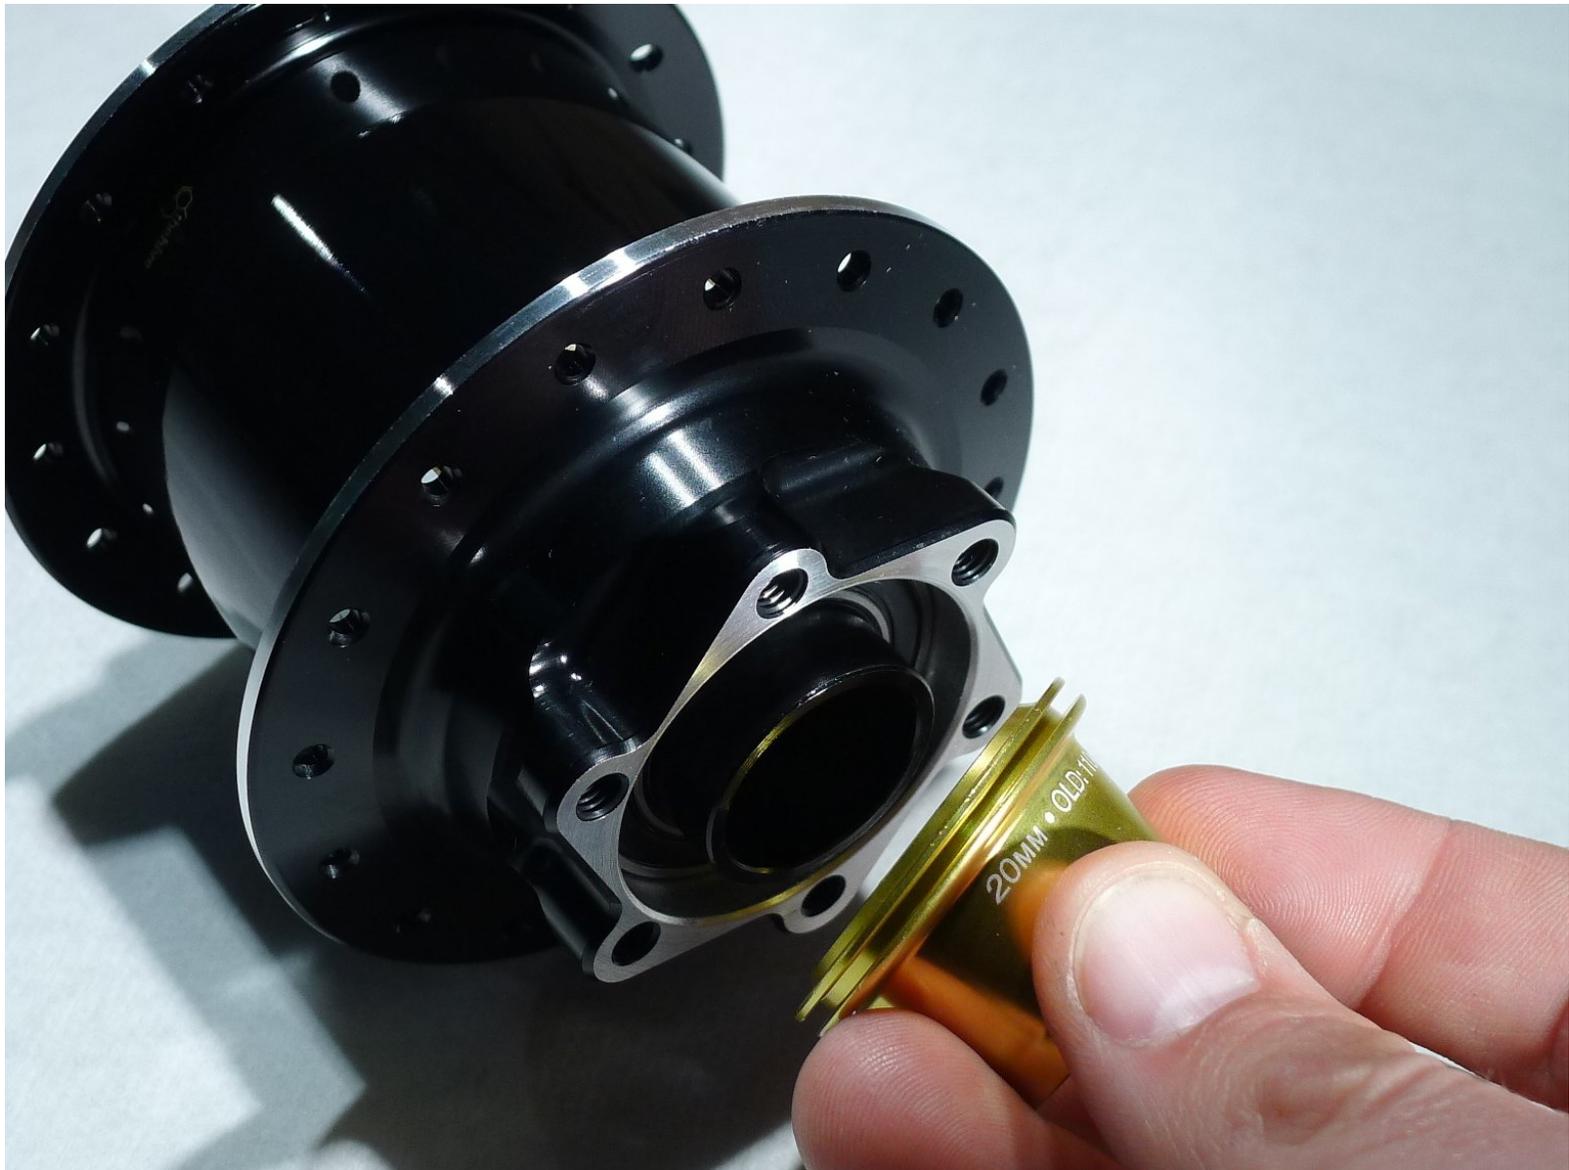



PARTS:

- [grease](#) (1)

Step 1 — How to change front hub endcaps - XCX+, TRS+ and LG1+



- **Available endcaps**
 - XCX hubs
 - 9mm QR
 - 15mm thru axle
 - TRS and LG1 hubs *same endcaps used on both hubs*
 - 9mm QR
 - 15mm thru axle
 - 20mm thru axle

Step 2



- Remove the endcap by pulling firmly on it
- Rocking the endcap side to side can help loosen it

Step 3



- Lightly grease the O-ring on the endcap before reinstalling

Thanks for reading, now get out there and ride!