




How to Replace LG1 Pedal Plastics

Removal and installation of pedal plastics

Written By: The Hive - Jeremy

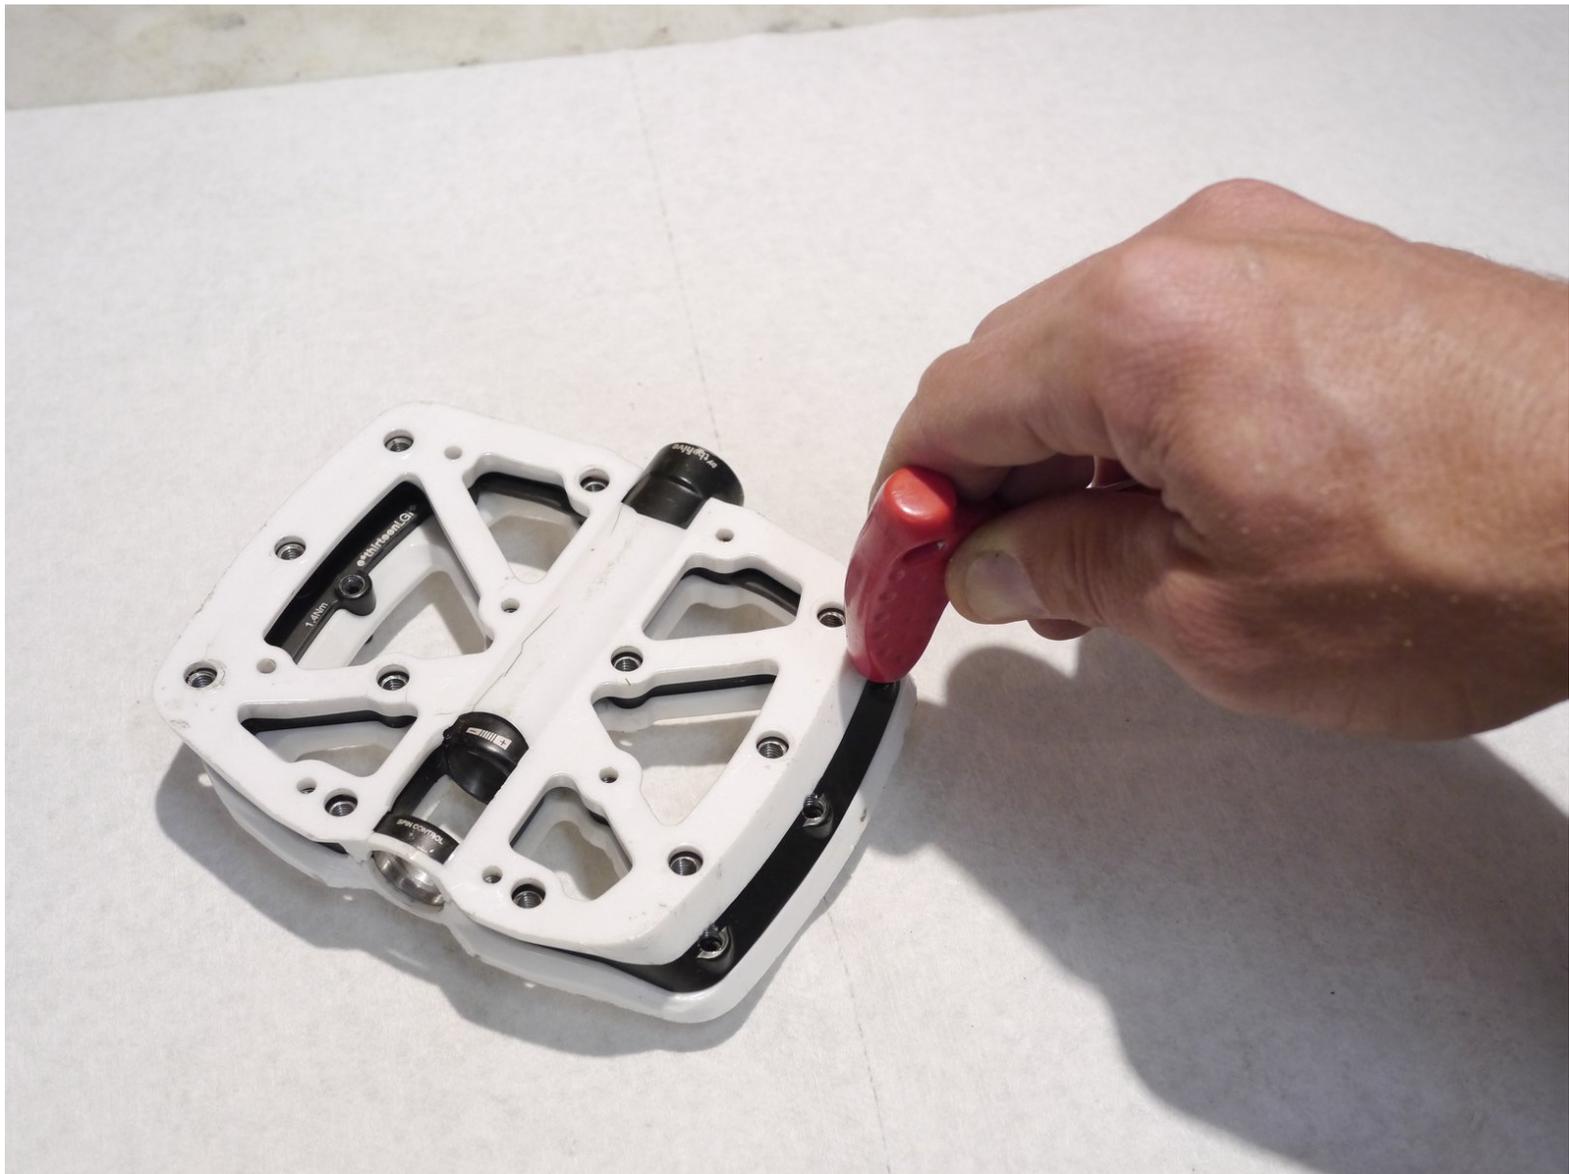

 **TOOLS:**

- 1.5mm or 2mm hex wrench depending on age of pedals (1)
-

Step 1 — How to Replace LG1 Pedal Plastics



- Start by removing all the pedal pins, these are accessed from the back of the pin

Step 2




- Once the pins are removed simply pry the wearplates off the pedal body

Step 3



- Newer pedal plastics include slots for a flat blade screw driver if you are having trouble prying the plates off

Step 4

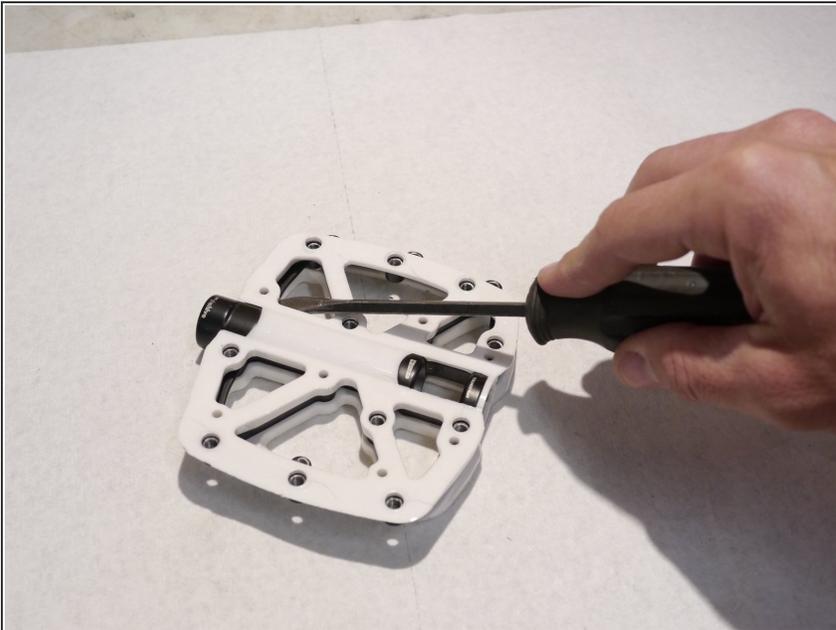

- For older pedals it may be helpful to loosen the wearplate before removal by prying a corner up

Step 5



- Clean the pedal bodies before installing new wearplates
- Wearplates are side specific. If you can't get a wearplate to line up, it may be for the other pedal
- Push firmly on the wearplate to engage it on the pedal body
- Re-install the pedal pins

Thanks for reading, now get out there and ride!